


Smoke Alarms and Carbon Monoxide Alarms

CRC 314.3 Location. Smoke alarms shall be installed in the following locations:

1. In each sleeping room.
2. Outside each separate sleeping area in the intermediate vicinity of the bedrooms.
3. On each additional story of the dwelling, including basements and habitable attics and not including crawlspaces and uninhabitable attics. In dwellings or dwelling units with split levels and without an intervening door between the adjacent levels, a smoke alarm installed on the upper level shall suffice for the adjacent lower level provided that the lower level is less than one full story below the upper level.
4. Smoke alarms shall be installed not less than 3 feet horizontally from the door or opening of a bathroom that contains a bathtub or shower unless this would prevent placement of a smoke alarm required by section R314.3.

CRC 315.3 Location. Carbon Monoxide alarms in dwelling units shall be installed and maintained in accordance with the manufacture's published instructions in the following locations:

1. Outside of each separate sleeping area in the immediate vicinity of the bedrooms.
2. On every occupiable level of a dwelling unit, including basements.
3. Where a fuel-burning appliance is located within a bedroom or its attached bathroom, a carbon monoxide alarm shall be installed within the bedroom.

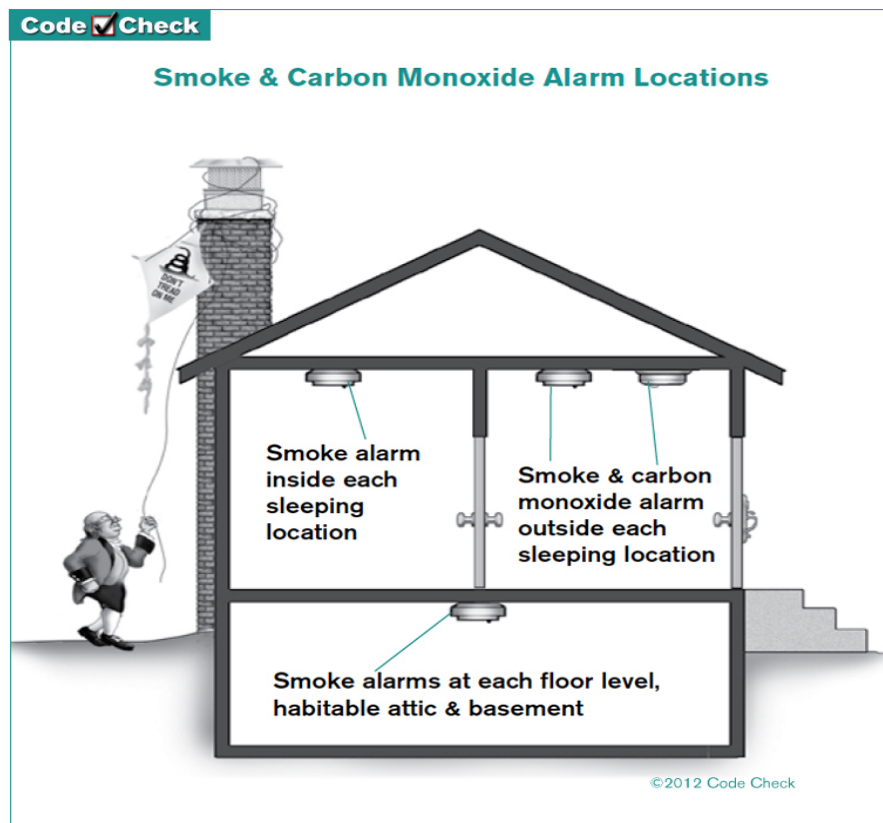

- This document is meant to offer perspective and does not imply to be an exhaustive code evaluation or a prescriptive repair to your property. It is your responsibility to determine proper installation, determine what work requires permits, and to obtain permits when required.